


H3/Escalade Extended Windshield Instructions

1. You will need:

- 2 clamps
- 2 stainless steel brackets
- 4 – 6 $\frac{3}{4}$ " phillips flat stainless steel screws
- 4 – 632 $\frac{3}{4}$ " bolts + washers

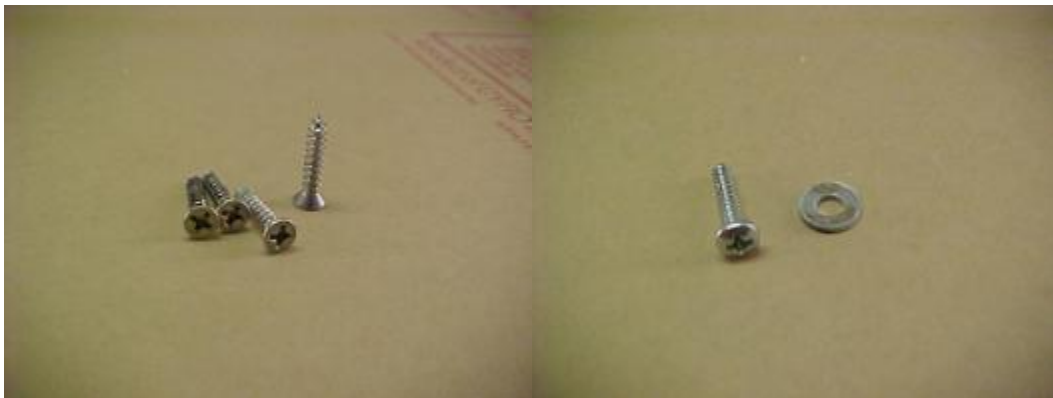

2.

Measure $\frac{3}{4}$ " from top of window frame pillar and use $\frac{1}{8}$ " in drillbit to drill holes for brackets. Use flat screws to install brackets. Make sure brackets are adequately centered on the pillar.



3. Put windshield on brackets and secure. Measure about 3 1/2" from the top of the windshield, centering along the rooftop frame. Remove windshield from brackets before installing clamps. Use 1/8" drillbit to drill holes for the clamps. Use bolts and washers to install clamps onto windshield.



4. Put windshield back on brackets and push clamps into rooftop frame to secure.



